




# Fugoo Tough Battery Replacement

This guide shows how to remove and replace the battery of the Fugoo+Tough.

Written By: Alicia Edwards

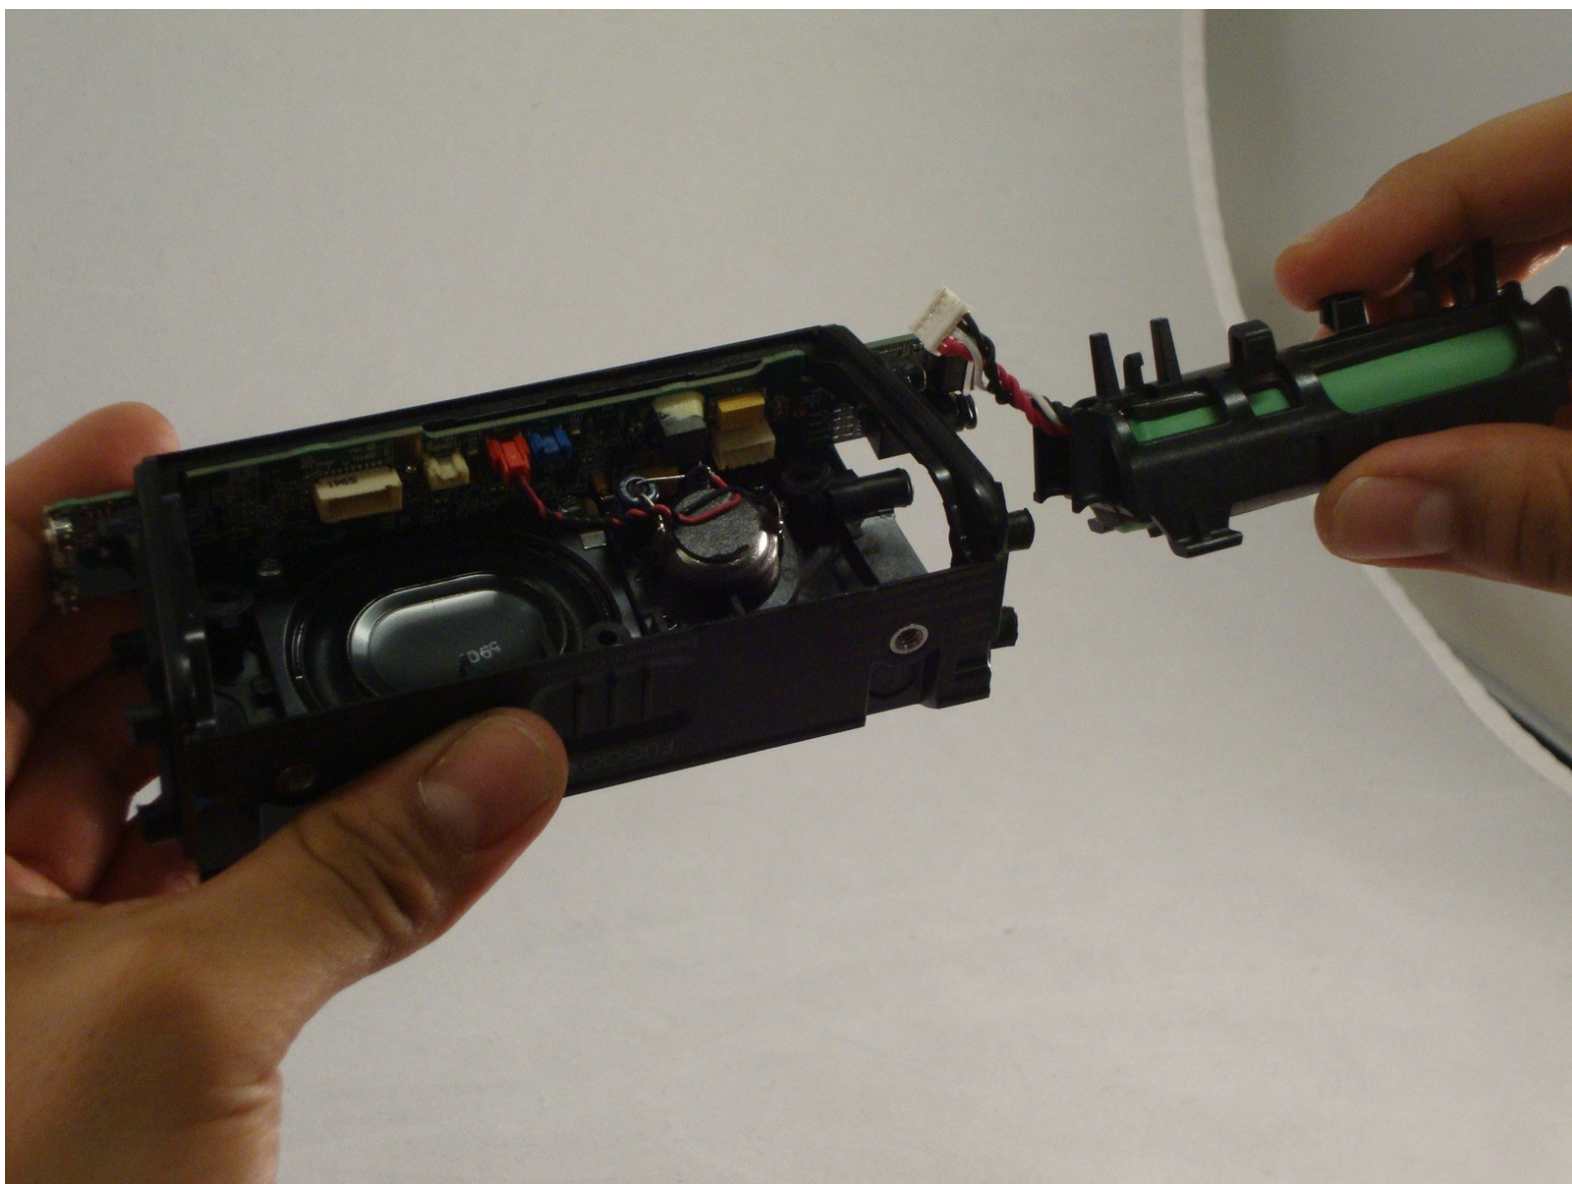

## INTRODUCTION

This guide shows how to remove and replace the battery of the Fugoo Tough.



### TOOLS:


- [iFixdit 4mm Screwdriver Bit, hex 2.0](#) (1)
- [iFixit 4 mm Screwdriver Bit, hex 1.5](#) (1)
- [iFixit 4 mm Screwdriver Bit, hex 1.3](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:

- [Fugoo Battery](#) (1)

## Step 1 — Battery

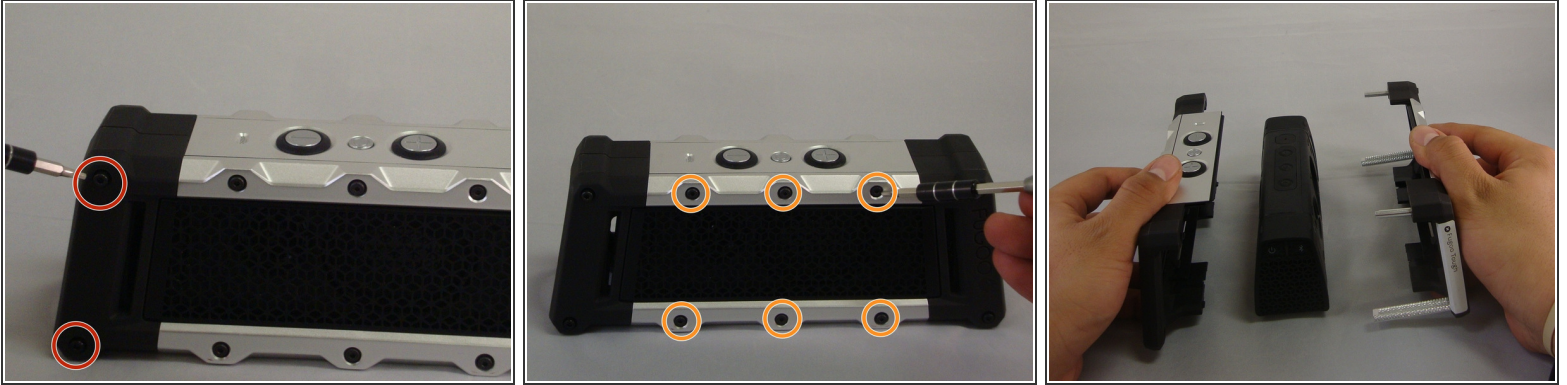

- Begin by unscrewing the four 10.72mm corner screws using the h2.0 screwdriver.
- Using the h1.5 screwdriver remove remaining 6-5.79mm screws on the front of the speaker.
- Pull front part of shell away from back part of shell.


## Step 2



- Change to the h1.3 head. Remove all 4-5.57mm screws on both speaker covers
- Pull on the speaker covers, thus removing them
- Rotate to side the speaker that has the charging port. Remove the 4-5.57mm screws of the facing you.
- Rotate the speaker 180 degrees and then remove 4-5.57 screws on the side speaker that has the power/bluetooth buttons




## Step 3

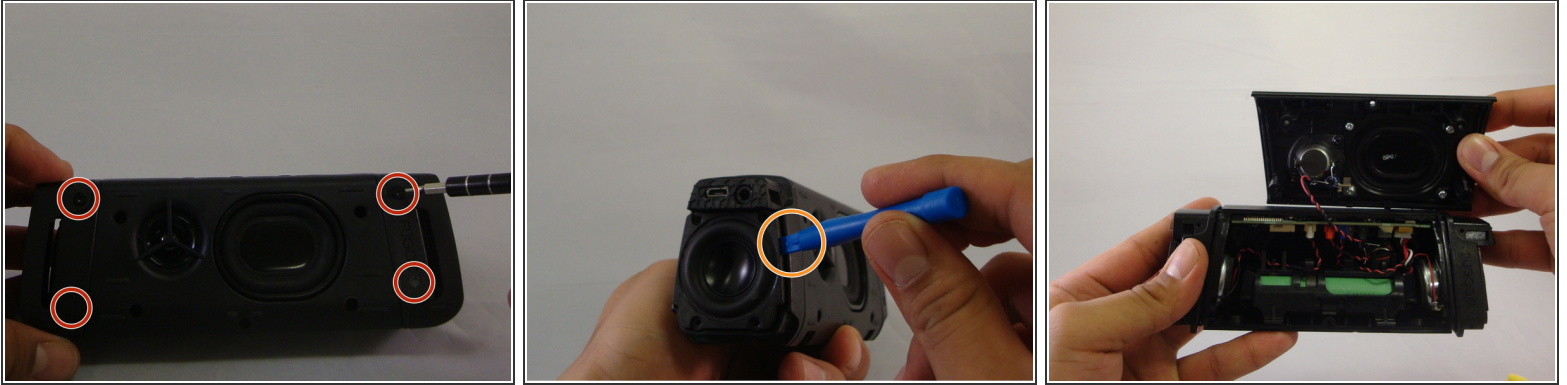

- Have back of speaker facing you, remove 5-12.70mm screws using 1/16 flat head screwdriver.
- Using the plastic opening tool, you will be able to wedge back face of speaker off.

## Step 4

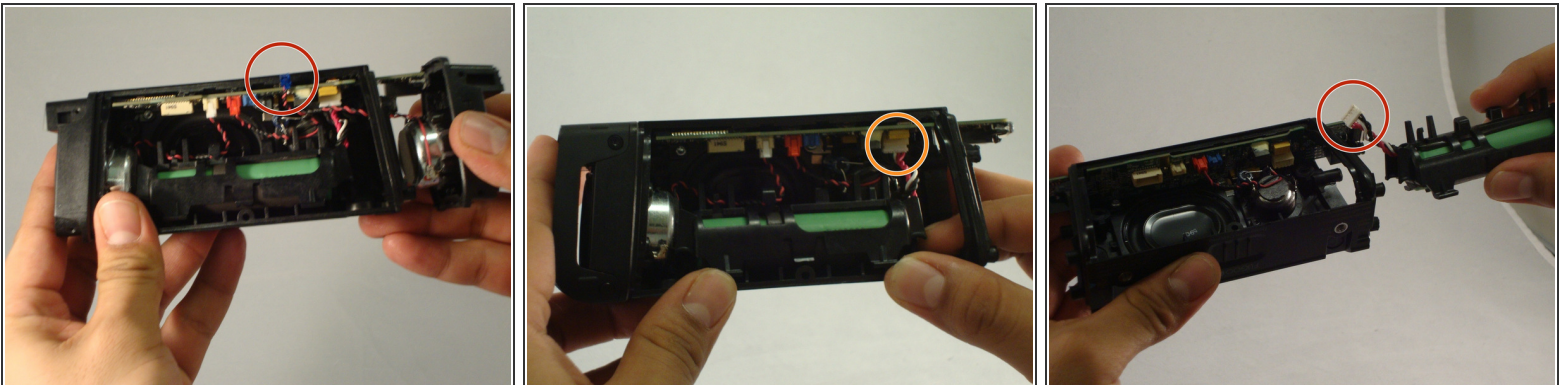

- ⓘ The circuit board will be revealed, you will notice the various clips/wires that go to the speakers and the battery
- Remove the blue "clip" from the mother board, then pull the on the speaker and remove it, to give you more room to work
- Gently pull down on the largest bundle of wires connected to the mother board by a white clip.
- ⓘ Battery isn't anchored down, you will be able to pull it out of device
- The battery can now be replaced

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-08 04:25:56 PM.